

GENERAL LOCK® ED9000/EDX9000 Trim INSTALLATION INSTRUCTIONS

OUTSIDE THUMBPIECE TRIM CLASSROOM / PASSAGE / NIGHT-LATCH FUNCTION

1

Prepare door for exit device. See the exit device instruction.


2

Prepare the door for trim.

Follow exit device template to transfer vertical and horizontal center lines from interior (exit device side) to exterior (trim side).


3

For TP and NL trim, install rim cylinder.

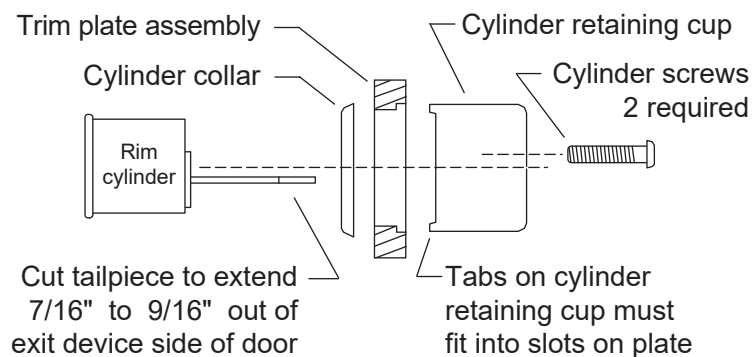

4

Use TP and TP-BE trim on 1-3/4" thick door, cut 1/4" off thumbpiece.

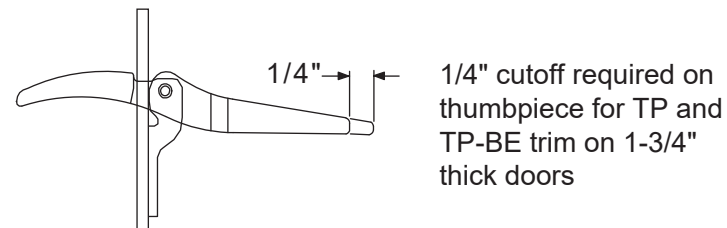

5

Tighten exit device, thru-bolt to trim, and use screw and 1/4" countersink washer for lower trim mounting stud.

